

## Multivator - Tillage Head Widths - Model FP, FPA & FPA

Head Size	Possible Tillage Widths	Overall Head Width	Notes
9" - 11"	6.25"	8.75"	all blades turned in, mounted inside
9" - 11"	7.5"	10.75"	2 blades turned out, mounted inside
12" - 16"	8.5"	12"	all blades turned in, mounted inside
12" - 16"	11.5"	13.75"	2 blades turned out, mounted inside
12" - 16"	12.5"	16"	2 blades turned out, mounted outside
18" - 22"	15"	17.75"	blades turned in, mounted inside
18" - 22"	16.5"	20"	blades turned in, 2 mounted outside
18" - 22"	19.5"	21.75"	2 blades turned out, mounted inside
24" - 32"	20.75"	24.75"	2 flanges, 2 blades turned out, mounted outside
24" - 32"	23"	25.5"	3 flanges, blades turned in, mounted inside
24" - 32"	24.5"	27.5"	3 flanges, blades turned in, mounted outside
24" - 32"	27"	31.5"	3 flanges, 2 blades turned out, mounted inside
24" - 32"	28.5"	31.5"	3 flanges, 2 blades turned out, mounted outside

### Notes:

Blades are bolted to flanges with special hardened, shouldered blade bolts. There are four blades per flange. Blade mounting is described as follows:

Inside mounting - blades are bolted on inside of flange, towards the chain case.

Outside mounting - blades are bolted on outside of flange, away from the chain case.

Turned in - blades are positioned so that the angled portion of the blade points to the inside, towards the chain case.

Turned out - blades are positioned so that the angled portion of the blade points to the outside, away from the chain case.

This chart is intended for reference use only. If a particular head with, or tillage width needs to be obtained, please contact your dealer, or the sales team at Ford Distributing.