

## Multivator - Tillage Head Widths - Model FPSR, & FPSRXA

Head Size	Possible Tillage Widths	Overall Head Width	Notes
12" - 16"	9.75"	12"	all blades turned in, mounted inside
12" - 16"	14"	16"	2 blades turned out, mounted inside
18" - 22"	15.5"	17.75"	1 flange, 2 blades turned out, mounted outside
18" - 22"	18.25"	19.5"	2 flanges, blades turned in, mounted inside
18" - 22"	20"	21.5"	2 flanges, 2 blades turned in, mounted outside
24" - 32"	20"	24"	2 flanges, blades turned in, mounted outside
24" - 32"	24.25"	27.5"	2 flanges, 2 blades turned out, mounted inside
24" - 32"	25"	27.5"	2 flanges, 2 blades turned out, mounted outside
24" - 32"	28"	31.5"	3 flanges, blades turned in, mounted inside
24" - 32"	29.5"	31.5"	3 flanges, blades turned in, mounted outside
+ext shields	34"	39.5"	3 flanges, 2 blades turned out, mounted inside
+ext shields	35.5"	39.5"	3 flanges, 2 blades turned out, mounted outside

### Notes:

Blades are bolted to flanges with special hardened, shouldered blade bolts. There are four blades per flange. Blade mounting is described as follows:

Inside mounting - blades are bolted on inside of flange, towards the chain case.

Outside mounting - blades are bolted on outside of flange, away from the chain case.

Turned in - blades are positioned so that the angled portion of the blade points to the inside, towards the chain case.

Turned out - blades are positioned so that the angled portion of the blade points to the outside, away from the chain case.

This chart is intended for reference use only. If a particular head with, or tillage width needs to be obtained, please contact your dealer, or the sales team at Ford Distributing.